



# CORRECT PLACEMENT OF YOUR E-way® TAG



## VERTICAL WINDSCREEN

Attach your tag to the bottom of the windscreen in the centre



## SLOPED WINDSCREEN

Attach your tag to the windscreen behind the rear vision mirror

## CHOICE OF BRACKET

The choice of bracket will depend on whether your vehicle has a vertical or sloped windscreen. The correct bracket will send the signal at the right angle to be read by the readers in an overhead gantry at the toll plaza.

## LOCATION

The correct location of a tag using the correct bracket is important for performance of the tag. Tags should **NEVER** be handheld, attached to the dash or left in the glovebox. Tag users who don't fit their tag correctly may be levied the administration charge in the event that the tag is not read. To view windscreen images of correct tag installations, please visit [www.tollpay.com.au](http://www.tollpay.com.au).

## INTERCHANGEABLE BRACKET

If you want to use the tag in more than one vehicle with a sloped windscreen there is an interchangeable bracket available. If your vehicles are a mix of sloped and vertical windscreens then a separate bracket and tag are required.

## SLOPED WINDSCREEN

- > For sloped windscreens the best location is attached to the windscreen behind the rear vision mirror.
- > If there is insufficient room then locate adjacent to rear vision mirror at the top of the windscreen.
- > If there is any metal such as external sun visors, ladders, etc, above the tag it will need to be mounted lower down the windscreen.
- > Some windscreens may contain metal to activate features such as rain detectors for automated wipers etc. Metalised windscreens can interfere with the performance of the tag. Please ensure you consult your user guide to determine the exact location of an unmetallised section on your windscreen to correctly install the tag.
- > For split windscreens place the tag left of the join.

## VERTICAL WINDSCREEN


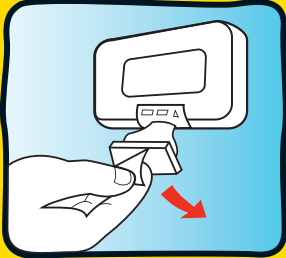
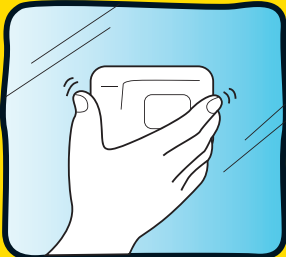
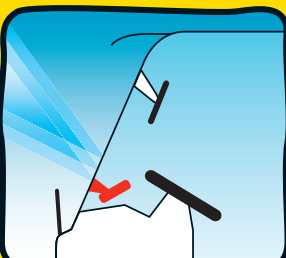
- > For vertical windscreens the best place is at the bottom of the windscreen in the centre.
- > If there is any metal such as stone guards, etc, above the tag it will need to be mounted higher up the windscreen.

# CORRECT PLACEMENT OF YOUR E-way TAG BRACKET

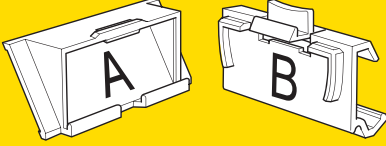
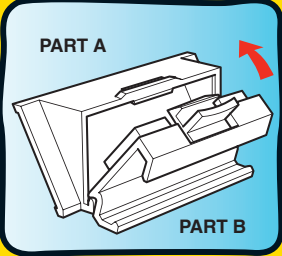
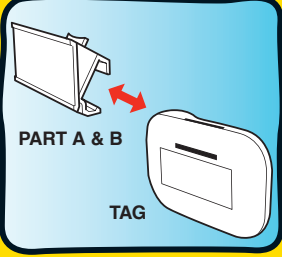
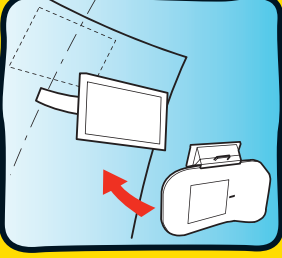
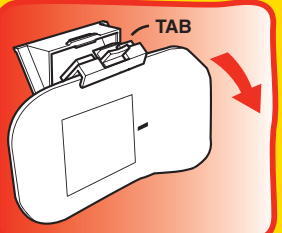
## IMPORTANT TIPS to consider when mounting your TAG BRACKET

- 1** Clean area of windscreen where bracket is to be attached, prior to removing the adhesive tape.
- 2** Carefully trial E-way tag bracket (without removing adhesive), to check the E-way tag will fit correctly in the space, will not be hit by loose objects and the driver's vision is not obscured.
- 3** When correctly installed, the white surface of the E-way tag will face outwards. Should you experience installation difficulties, please contact E-way on 1300 555 833.

### VERTICAL WINDSCREEN TAG BRACKET MOUNTING

- 1**  Click support into E-way tag.
- 2**  Peel off adhesive backing.
- 3**  Make sure the E-way tag is straight and the white surface of the E-way tag faces outwards. Carefully position, stick the holder on the windscreen, and hold for one minute.
- 4**  Your E-way tag is now ready for use.

### INTERCHANGEABLE SLOPED WINDSCREEN TAG BRACKET MOUNTING INSTRUCTIONS

- 1**  Connect Part A to Part B as shown here.
  - 2**  Attach the interchangeable bracket (Parts A & B) to your E-way Tag.
  - 3**  Align E-way Tag and bracket, remove protective strip from adhesive tape on bracket and press onto windscreen and hold for one minute.
  - 4**  Your Removable Tag system is now ready for use.
- REMOVAL**  
When you wish to remove the tag, press the tab to release.
- 

DISCLAIMER: Interlink Roads Pty Ltd and its agents and contractors will not be liable for any damage caused to you, to other persons or to property if you fail to follow instructions on this sheet.

E-Way® & the E-way chevron device – registered trademarks in the name of Interlink Roads Pty Limited.  
ABN 53 003 845 430